

CLAYTON

powered by delfin

All sales and support inquiries should be directed to Clayton

Clayton Associates, Inc.
1650 Oak Street
Lakewood, NJ 08701 USA

www.JClayton.com
P: +1.732.363.2100
F: +1.732.364.6084

Equipment classification: Industrial vacuum cleaners



PV-219-4



*Operator's and maintenance manual
Original and official manual
Rev. 16/09/2020*

Read this manual carefully before using the vacuum cleaner



This manual provides all the information needed to use and service your vacuum cleaner. Good operation and durability depend on proper maintenance and careful use.

Before leaving the factory, this particular model has undergone stringent tests to ensure utmost reliability. Always check however to make sure the vacuum cleaner has not been damaged during transport in such a way as to affect operation and safety.

This manual should be considered an integral part of the vacuum cleaner and must be kept together with the unit until this is scrapped. In case of loss of or damage to the manual, ask **DELFIN** for a new copy.

The technical details contained in this manual are the property of **DELFIN** and should be deemed of a confidential nature.

Even partial reproduction of the graphic project, the text and the illustrations is legally forbidden.

Some details shown in the illustrations in this manual may be different from those of your vacuum cleaner. Some component parts may have been removed for greater clarity.

For easier reference, this manual is split into sections, identifiable by specific graphic symbols.

The subjects dealt with in this manual are those expressly required by "**Machine Directive 2006/42/CE**" and the technical details shown are those provided by the manufacturer at the time of compilation. For ATEX Vacuums, the reference directive is the 2014/34/EU.

This manual must be kept in a place accessible to all the personnel charged with operating and servicing the vacuum cleaner.

In case of any doubts, always immediately phone the **After-Sales Service**.

The competent Law Court for all disputes is that of TURIN (Italy).

TECHNICAL SERVICE

Our engineers are available to help you in case any problem occurs.

Please call +39 011. 800550

The manual must be kept with the vacuum cleaner in case of resale!



Information section

1.1	Identification of main parts.....	- 1 -
1.2	Accessories provided	- 2 -
1.3	Identification details of manufacturer.....	- 3 -
1.4	Marking plate	- 3 -
1.5	Intended uses.....	- 4 -
1.6	Allowed environmental conditions.....	- 4 -
1.7	Storage.....	- 4 -
1.8	Scrapping	- 4 -
1.9	Technical details	- 5 -
1.10	Handling.....	- 7 -
1.11	Warranty.....	- 8 -

Safety section

2.1	Safety details.....	- 9 -
2.2	Safety warnings.....	- 10 -
2.3	Safety plates and symbols	- 14 -
2.4	Outstanding risks.....	- 15 -
2.5	Applied directives	- 15 -

Operation section

3.1	Installation	- 16 -
3.2	Work cycle.....	- 18 -
3.3	Releasing and removing the removable container	- 21 -
3.4	Using the filter shaking system	- 22 -

Maintenance section


4.1	Informative notes	- 23 -
4.2	General safety warnings.....	- 23 -
4.3	Maintenance operations	- 24 -
4.4	Replacing the filters	- 26 -
4.5	Troubleshooting	- 28 -

Spare parts section

5.1	Recommended spare parts.....	- 30 -
-----	------------------------------	--------



1.1 Identification of main parts

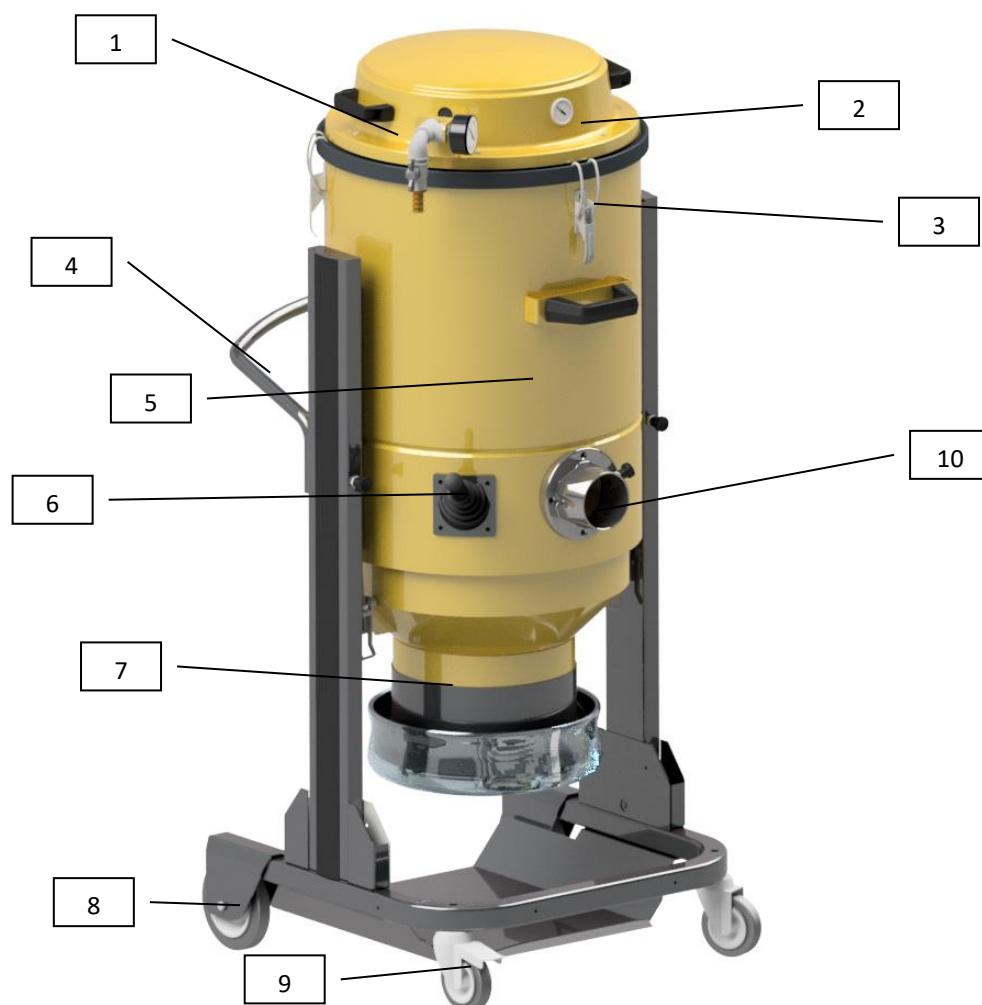


- 1) Vacuuming head
- 2) Vacuum meter
- 3) Cover release fasteners
- 4) Push handle
- 5) Filtering chamber
- 6) Filter shaking lever
- 7) Removable vacuumed material Longopac® container
- 8) Fixed wheels
- 9) Castors
- 10) Flexible hose inlet



1.2 Accessories provided



*FI.0063.0000- POL.C ANT D500 H400 20 POCKETS FILTER
(ONLY SPARE PART)*

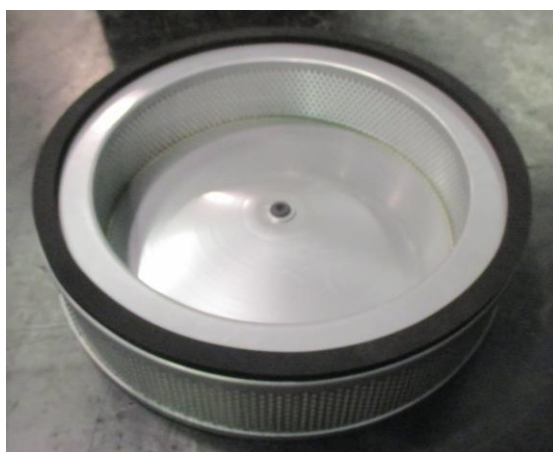

*FI.0003.0000- D430 H92 ABSOLUTE FILTER
(ONLY SPARE PART)*

Remark: these filters must be checked every six months. In case they are worn it will be necessary to replace them with new ones, to be requested as spare parts to **DELFIN S.r.l.**

DELFIN S.r.l. will accept no responsibility in case of use of **NON-ORIGINAL** filters.



1.3 Identification details of manufacturer

Delfin S.r.l.

Strada della Merla, 49/a
10036 Settimo Torinese (TO) Italy

Tel. +39 011-8005500

Fax +39 011-8005506

www.delfinvacuums.it

delfin@delfinvacuums.it

1.4 Marking plate

In compliance with the **Machine Directive 2006/42/CE** on vacuum cleaners, the machine is fitted with **CE** plates.

When contacting the manufacturer or dealer, always quote the details shown on the vacuum cleaner plate.

	<small>Strada della Merla 49/a I-10036 Settimo Torinese (TO) - ITALY Ph. +39 011 800 55 00 F. +39 011 800 55 06 delfin@delfinvacuums.it www.delfinvacuums.it</small>	
MOD. <input type="text"/>	S/N <input type="text"/>	FILTER <input type="text"/>
DESC <input type="text"/>	YEAR <input type="text"/>	
OPERATING PRESSURE <input type="text"/>	AIR SUPPLY <input type="text"/>	
MAX VACUUM <input type="text"/>	MAX AIR FLOW <input type="text"/>	
www.delfinvacuums.it		Made in Italy



1.5 *Intended uses*

These specific vacuum cleaner models have been designed, built and protected for vacuuming dusts and solid materials only, using special filters.

For ATEX vacuums, antistatic filters are used according to ATEX Directive 2014/34/EU.

Warning!

Always use specific filters for the type of dust or materials to be vacuumed.

Any other use is considered ***IMPROPER***.

The vacuum cleaner is in any case intended for professional industrial use.

1.6 *Allowed environmental conditions*

To ensure the correct operation of the vacuum cleaner, this must be positioned protected against atmospheric agents (rain, hail, snow, fog, dusts in suspension, etc.) with an environmental running temperature between 5°C and 45°C and relative humidity not above 70%.

The work environment must be clean, well-enough lit and devoid of explosive atmosphere.

1.7 *Storage*

Remove the filter and clean it, empty the container (in case of Longopac vacuums: replace the bag) and store the vacuum cleaner in a place protected against atmospheric agents with a temperature between 0°C and 40°C. Cover with a nylon sheet to prevent accumulation of dust.

1.8 *Scrapping*

In case of scrapping, all the component parts of the vacuum cleaner will have to be disposed of through adequate disposal channels in accordance with applicable legislation.

Before scrapping, all plastic and rubber parts will have to be separated from the electrical material. Parts made of plastic, aluminium and steel only may be recycled if collected by special centres.



1.9 Technical details

<i>Model</i>		ESD.AIR-0038
<i>Usage</i>		Dusts/Liquids
<i>Air supply pressure</i>	<i>Atm</i>	6
<i>Max. vacuums rate</i>	<i>mm H₂O</i>	5.000
<i>Max. air flow rate</i>	<i>m³/h</i>	465
<i>Noise level (*)</i>	<i>dB (A)</i>	74
<i>Filter type</i>		Polyester M+H
<i>Filter surface</i>	<i>cm²</i>	30.000
<i>Capacity</i>	<i>lt</i>	Longopac
<i>Suction inlet</i>	<i>ø</i>	80
<i>Dimensions</i>	<i>cm.</i>	80 x 66 x 155



() Noise level*

Noise level readings were taken in accordance with the provisions of *Machine Directive 2006/42/CE* standards.

Sound tests performed on this specific vacuum cleaner model have been taken from a distance of 1 meter and from a height of 1,60 meters, showing an acoustic pressure no higher than the one indicates in the table.

The vibrations transmitted by the machine are lower than 2,5 m²/s.


Attention!

Pursuant to articles L.D. 81/08, workers exposed to sound pressure levels above 85 dB (A) must be protected by special individual protection devices.

It is therefore necessary, if such working conditions exist, to provide workers with such approved individual protection devices and to inform them of the risks relating to noise exposure.



1.10 Handling

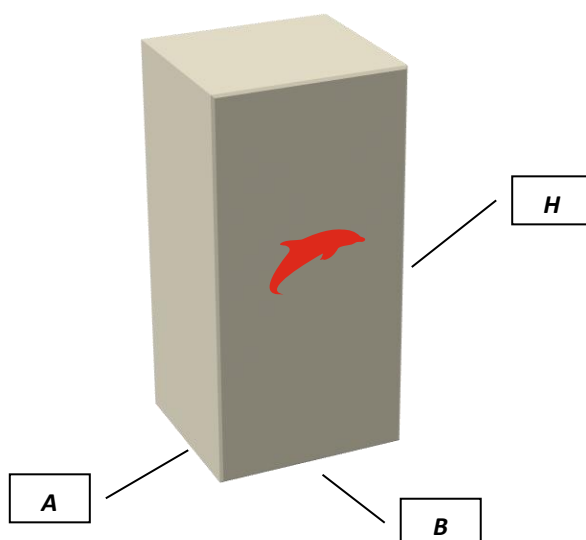

The machine is supplied in a strong cardboard box secured with straps.

Transport the package using a fork-lift truck of adequate lifting capacity and make sure it is stable and that weight is properly distributed on the forks.

Before starting to move, make sure the transit area is free and that there are no moving objects on the packaging.

During movement, keep the load low for greater stability and safety.

When starting up the vacuum cleaner, move this by means of the wheels supplied.

The appliance must never be moved using fork-lift trucks or other equipment that lifts it off the floor.

If for any reason the need arises to lift and transport the vacuum cleaner, this operation must be performed under the responsibility of the user. The user is therefore invited to secure the load as he best thinks fit to ensure the operation is performed in total safety.



1.11 Warranty

DELFIN guarantees this vacuum cleaner model for a period of 24 months from the date of purchase indicated on the tax document at the time of delivery of the vacuum cleaner by the seller.

The warranty shall be invalidated in the event of the vacuum cleaner having been repaired by unauthorised third parties or of equipment or accessories being used that have not been supplied by **DELFIN** or which have not been recommended or approved by **DELFIN** or whose serial number has been removed or altered during the warranty period.

DELFIN undertakes to repair or replace, free of charge, those parts which, during the warranty period show manufacturing faults. Repairs shall be made in the **DELFIN** facilities only or in a **Technical Assistance Centre** indicated by us and machines shall be sent to us carriage free (transport costs to be paid by the user, unless otherwise agreed).

The warranty does not cover any cleaning of working parts.

Faults not directly attributable to materials or manufacture shall be examined only in our facility or in a **Technical Assistance Centre** indicated by us. If claims appear unjustified, all the costs relating to repair and/or replacement of parts shall be charged to the buyer.

The purchase tax document shall be shown to the technical personnel making the repairs and must accompany the vacuum cleaner dispatched for repair.

The warranty does not cover: accidental damage, caused by transport or carelessness or inadequate treatment, or improper use not in compliance with the instructions in the instruction manual, or in any case by occurrences not dependent on normal operation or use of the vacuum cleaner. **DELFIN** declines all responsibility for any damage to persons or things caused by bad or improper use of the vacuum cleaner.

All disputes shall be referred to the Law Court of Turin (Italy).

The manufacturer declines all liability in the following cases:

- *Failure to send the warranty Certificate*
- *Failure to follow the instructions*
- *Use of non-original spare parts*
- *Failure to service the machine properly*



2.1 Safety details

The person in charge of safety shall be responsible for informing workers about the risks associated with vacuum cleaner operation.

The obligation also exists of training workers so they are able to protect themselves and others.

Failure to observe basic safety regulations and Warnings could cause accidents during vacuum cleaner operation, maintenance and repair. Accidents can often be avoided by recognising potentially dangerous situations before these occur. Operators should be aware of potential hazards and be trained and skilled enough. They should also have the tools necessary to perform these duties properly.

DELFIN shall under no circumstances be deemed liable for accidents or damage caused by use of the vacuum cleaner by personnel not properly trained or who use it in an improper manner, as well as by even partial failure to comply with the safety regulations and intervention procedures indicated in this manual.

The safety Warnings and warning notices are indicated in this manual and on the product.

Unless these hazard messages are heeded, the operator could become involved in accidents with serious consequences for him/herself and for other people.

The safety messages are highlighted by the following symbols:

Attention!

Unless these messages are heeded, operator injuries could occur.

Warning!

Unless these messages are heeded, vacuum cleaner damage could occur.

DELFIN cannot foresee all possible circumstances capable of representing a potential hazard. The warnings in this manual and on the products should not therefore be deemed exhaustive. In the event of tools, procedures, work or machining methods being used that are not explicitly recommended by **DELFIN**, make sure no hazards exist for operators and others.

Only ever use original DELFIN spare parts.

DELFIN declines all liability in the event of non-original spare parts being used.



2.2 Safety warnings

Attention!

The following indications are, by themselves, not enough to fully protect against all the hazards that could arise during vacuum cleaner operation. These will have to be integrated with common sense and the experience of the operator, both of which are crucial factors for preventing accidents. Each section of this manual lists further specific safety warnings for the various operations.

Maintenance jobs must always be performed with the power plug detached from the power point.

The employer must inform and train the user according to the provisions of applicable laws.

Before using the machine, prepare and train yourself by reading this manual carefully. Use of the machine by untrained and unauthorised persons is forbidden.

Using the machine to vacuum toxic substances is forbidden unless this has been equipped with special filters required for the specific type of dusts. Such filters must be explicitly requested by you.

If the machine is used to vacuum toxic-harmful substances, the container must be emptied and the filters cleaned using adequate individual protection devices, selected according to the type of substances to be vacuumed.

Do not vacuum flammable materials or substances or which could cause explosions (fuels, solvents, etc.). To vacuum such materials, the machine must be built with Anti-explosion Motor and Electric System and this must be requested by you explicitly.

Do not vacuum corrosive substances unless the machine is equipped with containers suitable for this purpose (*Stainless-steel AISI 304*).

Use of the machine without the supplied filters is not recommended.

If the filters are correctly fitted, the machine will not eject any objects.

Never rest miscellaneous materials on the horizontal protection guard.

The machine casing containing moving parts must not be removed by the user.

When using the machine, mind other people, especially children.

Use the machine cautiously on slopes and ramps.

Do not change direction on gradients.

Make sure the parked machine remains stable by operating the braked wheel.

During cleaning operations, maintenance jobs or when changing parts, the starter switch must be off and the machine must be disconnected from the power mains by removing the cable from the socket.

Only skilled persons should carry out repairs.



Periodically check the mains power cable to ensure this is not damaged.

In the event of couplings being replaced, make sure these are protected against water spray and check mechanical strength.

Never pull the machine by means of the vacuum pipe.

The user is responsible for disposing of vacuumed substances in accordance with applicable laws.

After 10 years of use, we recommend sending the machine for a complete overhaul to **DELFIN S.r.l.**

The machine is supplied with: instruction manual, Exploded Spare Parts drawing, Test Sheet, Warranty Slip, Approval Certificate.

In the event of Customers fitting a tool to the machine not supplied by **DELFIN**, make sure the safety conditions required by **Machine Directive 2006/42/CE** are complied with and in any event, **DELFIN** is unable to accept liability for any problems arising from use of such tool.

The vacuum cleaner must not be operated in a corrosive or explosive environment.

Always make sure the vacuum cleaner is free of all foreign materials such as debris, oil, equipment and other objects that could affect operation and cause injury to persons.

Avoid using flammable or toxic solvents such as petrol, benzene, ether and alcohol for cleaning.

Avoid prolonged contact with solvents and inhaling their vapours. Avoid use close to open flames or sources of heat.

Never use the vacuum cleaner without the filter.

Do not vacuum lit cigarette ends. The filter could be damaged.

Do not vacuum petrol or flammable liquids in general.

Make sure all the guards and protection devices are in place and that all the safety devices are in place and working properly.

Do not wear loose or hanging clothing such as ties, scarves or torn garments that could become trapped and be sucked up by the cleaner.

Do not open the vacuum container with the machine running.

The manual should always be kept handy for reference so the operating cycle can be checked every time there are doubts. In the event of this manual being lost or damaged, ask **DELFIN** for a new copy.

Structural damage and improper alterations or repairs could change the protection capacity of the vacuum

cleaner and therefore cancel this certification.

Any alterations to the appliance must only be made by **DELFIN** engineers.



During maintenance jobs, affix a notice to the appliance indicating **"MACHINE BEING SERVICED, DO NOT START"**.

Climbing on the cleaner is forbidden.

In the event of an extension being used, make sure this is in perfect condition, marked **CE** and that the cross section of the cable is suitable for the vacuum cleaner power input.

When restoring original working conditions, the appointed personnel should make sure that at the end of the operating procedure, proper vacuum cleaner operation safety conditions are restored, especially the safety devices and the protective guards.

Only adult persons should use the vacuum cleaner.

During vacuuming operations, always brake the vacuum cleaner using the special revolving wheel lock.

In case of vacuums with grounding system, connect the grounding clamp with a conductive surface connected with the earth.

For ATEX Vacuums:

- Connect the grounding clamp with a conductive surface connected with the earth.
- Do not manumit the vacuum/pressure relief valve.
- All maintenance operations must be executed in non-classified atmosphere.
- Do not vacuum incandescent or burning material.
- The operator must always wear antistatic cloths and shoes. The floor of the area to be vacuumed must be antistatic.
- The opening of the dust collection container must be executed in non-classified atmosphere area, after having disconnected and unplugged the machine and only after 10 minutes from unplugging.
- It is prohibited to vacuum toxic substances unless the machine is provided with the necessary specific filters for the type of dust to be vacuumed. Such specific filters must be expressly required by the Customer for supply.
- Do not vacuum flammable or explosive substances gases or liquids (fuels, solvents etc.).
- Do not vacuum corrosive substances unless the machine is equipped with suitable containers (*Stainless-steel AISI 304*).
- Do not suck lighted cigarettes, cigarette stubs or incandescent materials.
- Do not vacuum sources of ignition.
- The supply cable tap must be correctly plug in the current outlet in **NON CLASSIFIED** atmosphere, or rather in a safety place.



For LONGOPAC Vacuums:

- If the machine is used to vacuum toxic-harmful substances, the Longopac® container must be emptied and the filters cleaned using adequate individual protection devices, selected according to the type of substances to be vacuumed.
- Do not open the vacuum Longopac® container with the machine running.



2.3 Safety plates and symbols

Plates are affixed to the vacuum cleaner showing safety symbols and/or messages.

Attention!

Make sure all the safety messages are legible.

Clean these with a cloth, soap and water. Do not use solvents, diesel fuel or petrol.

Replace the damaged plates with new ones supplied by DELFIN.

If a plate is affixed to a replaced part, make sure a new plate is affixed to the new part.

Attention!

Read the operator's and maintenance manual carefully before using the cleaner or doing any maintenance jobs.

ATTENZIONE! WARNING! ATTENTION! ACHTUNG! ¡ATENCIÓN! ATTENTIE!

- SCUOTERE IL FILTRO SOLO A MACCHINA SPENTA
- ONLY SHAKE THE FILTER WHEN THE MACHINE IS TURNED OFF
- NE SECOUER LE FILTRE QU'APRES AVOIR ETEINT LA MACHINE
- RÜTTELN SIE DEN FILTER NUR BEI AUSGESCHALTETER MASCHINE
- SACUDIR EL FILTRO SÓLO CON LA MÁQUINA APAGADA
- FILTER SCHUDDEN BIJUITESCHAKELDE MACHINE

IMPORTANT

**DO NOT BREATHE IN INFLAMMABLE AND/OR
EXPLOSIVE LIQUIDS OR POWDERS**

Warning!

Risk of crushing upper limbs while fitting and locking the material container (or material Longopac® container) on the vacuum cleaner.

Never place hands between the material container (or the material Longopac® container) and vacuum cleaner while locking.

Do not place hands on sides of container (or Longopac® container) near the guide pins while locking.

Perform the container (Longopac® container) locking operation by means of the levers located on the side, USING BOTH HANDS!



2.4 Outstanding risks

Careful analysis of risks performed by the manufacturer and stored in the technical file has made it possible to eliminate most of the risks associated with vacuum cleaner operation.

The manufacturer advises carefully following the instructions, procedures and advice contained in this manual as well as applicable safety regulations, including the use of the envisaged protection devices, both those integrated in the cleaner and individual.

Outstanding risks associated with the vacuum cleaner could be:

Risk of improper use in the presence of explosive and flammable substances.

The vacuum cleaner must not be used in environments containing substances in the form of liquids that could vaporise at room temperature and flammable dusts and gas.

Risks of operation in humid environments.

Keep to the limits shown in this manual at chap. 1.6 Allowed environmental conditions.

Risk of erroneous interpretation of the safety pictograms.

Having identified the various outstanding risks, the manufacturer has affixed to the cleaner a number of hazard labels in compliance with regulations relating to the graphic symbols to be used. The user must immediately replace any safety plates that become illegible due to wear or damage.

Attention!

Removing the safety plates on the vacuum cleaner is strictly forbidden. The manufacturer declines all liability in relation to vacuum cleaner safety in the event of failure to comply with the above indications.

2.5 Applied directives

The following directives apply to the vacuum cleaner described in this manual:

- ***2006/42/CE Machine Directive***
- ***2014/30/EU Electromagnetic compatibility directive (**)***
- ***2014/35/EU Low-voltage directive (**)***
- ***For ATEX Vacuums: 2014/34/EU ATEX Directive***

(**) For Air Series Vacuums, do not refer to this Directive.



3.1 Installation

Warning!

Before installing the vacuum cleaner, carefully make a sight check to pinpoint any damage suffered during transport.

In the event of any component parts being damaged, do not proceed with installation. Notify the manufacturer and reach an agreement on how to proceed.

The vacuum cleaner already features a suction filter.

Fit the accessory required for the type of vacuuming operation on the opposite end of the hose.



Note: No standard accessories (reducers, hoses, nozzles) are included with the vacuum; accessories must be specified and ordered separately.

Contact your dealer for information relating to the different types of *optional accessories* available for this specific vacuum cleaner model.



 


 




Fit the supplied pipe in the connector.

Fit the supplied pipe on the pipe union.





Make sure the power supply corresponds to the voltage and frequency indicated on the vacuum cleaner plate. For AIR SERIE vacuums, please check the vacuum's operating values

STANDARD	<div><div>Strada della Merla 49/a I-10036 Settimo Torinese (TO) - ITALY Ph. +39 011 800 55 00 F. +39 011 800 55 06 delfin@delfinvacuums.it www.delfinvacuums.it</div></div> <div>MOD. <input type="text"/> S/N <input type="text"/></div> <div>DESC. <input type="text"/> YEAR <input type="text"/></div> <div> 50 Hz <input type="text"/> FILTER <input type="text"/></div> <div>60 Hz <input type="text"/> <input type="text"/></div> <div>www.delfinvacuums.it Made in Italy</div>
SERIE AIR	<div><div>Strada della Merla 49/a I-10036 Settimo Torinese (TO) - ITALY Ph. +39 011 800 55 00 F. +39 011 800 55 06 delfin@delfinvacuums.it www.delfinvacuums.it</div></div> <div>MOD. <input type="text"/> S/N <input type="text"/> FILTER <input type="text"/></div> <div>DESC. <input type="text"/> YEAR <input type="text"/></div> <div> OPERATING PRESSURE <input type="text"/> AIR SUPPLY <input type="text"/></div> <div>MAX VACUUM <input type="text"/> MAX AIR FLOW <input type="text"/></div> <div>www.delfinvacuums.it Made in Italy</div>
ATEX	<div></div> <div>MOD. <input type="text"/> S/N <input type="text"/></div> <div> <input type="text"/></div> <div> <input type="text"/></div>

Warning!
Do not fit the plug in the power socket with wet hands.

In the event of an extension being used, make sure this is in perfect condition, in compliance with **CE** standards and with cable cross section suitable for the power input of the vacuum cleaner.



Pull one at a time the pins placed on the vacuum cleaner side and turn them until they will reach the locking position.

Lift the machine body using the handle. Lock the machine body turning again the pins to the initial position.

To lower the vacuum cleaner again proceed in the same way





3.2 Work cycle

- Make sure the flexible hose is properly fitted and locked in the vacuum pipe union.
- Block the vacuum cleaner by means of the retainer provided.



- Grip one end of the flexible hose complete with selected accessory
- Connect the pipe to the compressed air installation with a 3/8" rubber pipe (closed by a metallic clamp), open the valves and start the vacuum.
- To stop the vacuum close the valves and release the vacuum from the compressed air installation pipes.



To move the vacuum cleaner, use the large handle



Warning!

The vacuum can be moved only on flat ground!

If the vacuum is moved on inclined grounds, you can risk to lose the control, because of the weight and to damage persons or things.

Warning!

During vacuuming, avoid rolling up or bending the flexible hose.



3.3 Removal and placing of the waste bag

Stop the vacuum

Warning!

Disconnect the plug from the power socket.

- Use two clamps to fasten the collection bag at two points (about 3 – 5 cm. from each other), just below the filter chamber.
- Cut off the bag in the position between the two clamps.
- Remove the lower part of the bag.



- Pull down a length of new bag from the chamber, until it reaches the bottom support plate




Attention!

Used bags should be disposed of into a special waste disposal container, in accordance with laws applicable in the country where the vacuum cleaner is used.



3.4 Using the filter shaking system

This operation must only be performed with the machine switched off. The filter shaking system is best operated every time before use and after prolonged operation.

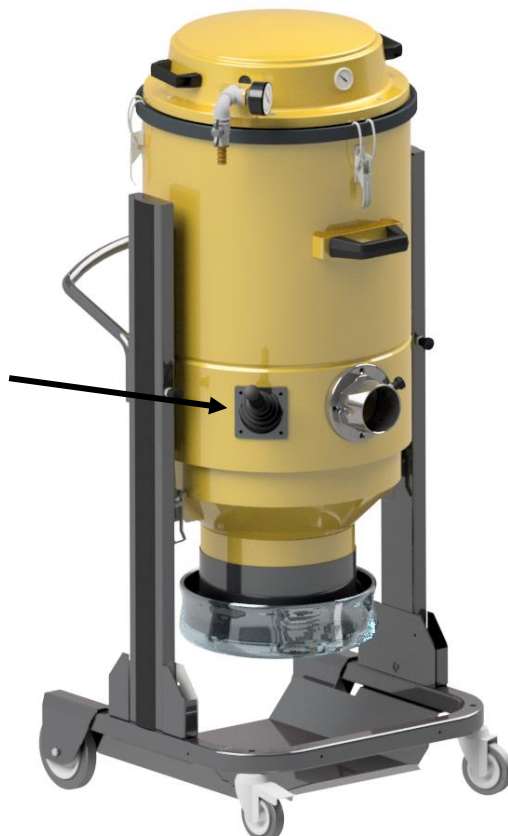

Warning!

During vacuuming, avoid rolling up or twisting the flexible hose.

On the back side of the vacuum there is a vacuum gauge indicating the level of depression inside the vacuum.

If when, using the vacuum with the flexible hose which is not obstructed and the vacuum gauge indicates irregular depression value, it will be necessary to shake the filter. If depression value continues to be excessive, it is necessary to clean or replace the filter.

Warning!

Never use the machine with clogged filters.

Warning!

If, after cleaning the filter, the vacuum gauge still indicates excessive depression, the flexible hose or the accessory may be obstructed. In such a case, it will be necessary to remove the obstruction.



4.1 Informative notes

This section describes the control and special maintenance operations crucial for keeping the vacuum cleaner in perfect working condition.

FOR ATEX VACUUMS

Attention!

All the transport and handling's operations described in this section must be done in NOT CLASSIFIED zone, which means in an area with non potentially explosive atmosphere.

Any other jobs which might be necessary to eliminate operating faults must be expressly authorised by the manufacturer. In such cases, always notify the identification details of the cleaner.

In the case of major repairs, it is best to contact an authorised dealer, whose skilled personnel, backed by all the technological experience relating to the original factory construction methods, are always available and ready to promptly intervene.

4.2 General safety warnings

Maintenance jobs must always be performed by skilled technicians, trained to carry out their specific jobs. In the case of this machine, these are:

- Mechanical maintenance
- Electrical maintenance **(***)**

The Safety Manager has the precise duty of determining the professional capacities and skills of such persons.

Before doing any maintenance job, the safety manager must:

- Make sure there are no unauthorised persons in the work area.
- Make sure the necessary tools are on hand and that these are in good condition.
- Make sure that lighting is adequate and, if necessary, provide 24-V portable lamps.
- Make sure the maintenance engineer is equipped with all approved individual protection devices needed for the specific operation (gloves, eyewear, shoes, etc.).
- Make sure the maintenance engineer has carefully read the instructions contained in this manual and knows how the vacuum cleaner works.

Before carrying out a maintenance job, the maintenance engineer must:

- Disconnect the plug from the power socket. **(***)**
- For ATEX Vacuums: Execute such operation in **NON CLASSIFIED** atmosphere, which means in an area with non potentially explosive atmosphere.



Work done on motors or other electrical component parts must only be performed by a specifically trained electrician, authorised by the Safety Manager.

Always use tools that are in perfect condition and specifically made for the operation to be done. The use of unsuitable tools or tools not in good condition could cause serious damage.

*(***) For Air Series Vacuums, do not consider.*

4.3 Maintenance operations

Attention!

All the described operations must be done with the plug disconnected from the power socket. Before starting any maintenance or cleaning job, always wear adequate protective clothing, eyewear and/or gloves according to the type of job to be done.

For smooth vacuum cleaner operation, a number of controls are best made periodically:

- Check to see whether the filter is worn or has become too permeable.
- Make sure the sealing gaskets of the motor head base, of the filter-holder ring and of the container are working efficiently.
- The electrical parts (plugs, switches, cables, etc.) must not be faulty.
- The screws and nuts must always be tight.
- Make sure the container is not overfull. This should be emptied when the vacuumed material has reached 3/4 of maximum capacity.
- Check the integrity of the flexible vacuum hose and accessories to be used.
- If the flexible hose is perforated, the power of the cleaner will be reduced and dust and liquids will leak into the environment.
- For vacuums with electric panel: A qualified operator must periodically verify the cables' tightening in the electric components of the electric board: with prolonged use of the vacuum, the vibrations can loosen the tightenings and cause important damages to components.
- For vacuums with compressor:


For maintenance operations of the compressor, see the specific manual.

However, it is necessary to check the oil level of the compressor periodically, the absence of oil in the compressor will damage it.



ATTENTION!

Periodically check the compressor's air filter integrity (1) and the shape of compressor's shelter.

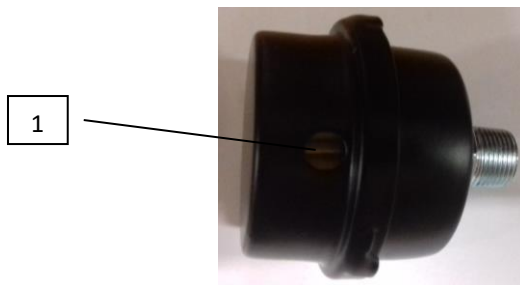

In case of shelter's damage, the filtration isn't guaranteed.

The blockage or not correct working of these components can make incorrect working of the compressor and oil's outflow.

- For ATEX Vacuums with anti-spark deflector: please check periodically its condition. In case it's too worn, it's not guarantee the required ATEX protection.

Warning!

All maintenance and repair jobs must be performed directly by DELFIN or its authorised dealers.



4.4 Replacing the filters

To replace the filters, proceed as follows:

Attention!


Wear individual protection devices

- Block the vacuum cleaner by means of the retainer.
- Unlock the retainers that lock the Longopac® container. Remove the Longopac® container.
- Release the retainers that hold the cover. Lift the cover and rest this on a flat surface being careful not to damage it.





- Remove from underneath the vacuum cleaner the pin (A) and spring pin (B) that fasten the filter to the shaking lever.

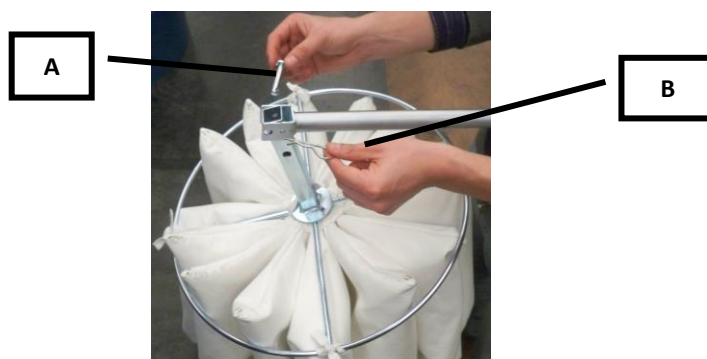

- Remove the filter with its complete support.



- Loosen the clamp and remove the support ring with seal.



- Remove the knots and take out the pocket filter. Fit the new filter and put everything back in place, locking the cap

Important!

All the material trapped by the filter and the filter itself must be disposed of through authorised channels in the country where the vacuum cleaner is used.



4.5 Troubleshooting

<i>Fault found</i>	<i>Possible fault</i>	<i>Recommended remedy</i>
<i>Dust is leaking out</i>	Perforated vacuum pipe	Replace the pipe
	Perforated filter	Replace the filter
	Filter unsuitable for type of job	Fit a suitable filter for the type of material to be vacuumed
<i>The vacuum cleaner does not work as it should</i>	Pipe perforated or blocked	Check the pipe and, if necessary, replace it
	Container full	Empty container
	Filter blocked	Clean the filter and if necessary change it.
	Seals worn	Check the seals and, if necessary, replace it
	Air leak	Check for any air leaks out of closing fasteners, tightening screws, container or filter chamber
<i>Motor very noisy.</i>	<i>Contact DELFIN after-sales</i>	

Warning!
For any other problems, contact the DELFIN after-sales service.

**Pump**

<i>Fault found</i>	<i>Possible fault</i>	<i>Recommended remedy</i>
<i>Pump not operating motor fails to start</i>	No power	Power the machine Reset the switch or replace the
	Automatic switch tripped or fuse burnt out	fuses with other suitable ones.
	Overload switch tripped	
	Faulty condenser	Resets automatically after cooling in single-phase version
	Impeller blocked	Change the condenser Foreign bodies between the fixed and rotating parts of the pump
<i>Pump not operating motor starts</i>	Liquid level dropped and bottom valve no longer under water	Be careful, the mechanical seal could be damaged.
	Pump not filled with liquid or drained due to leaks	Be careful, the mechanical seal could be damaged
<i>Pump operates at reduced flow rate</i>	Difference in pumping level above pump capacity or flow resistance too high during suction	Replace the suction pipe with one of bigger diameter. Reduce elbow bends to a minimum. Eliminate deposits.
	Pump or pipe blockages	Clean or remove blockages
<i>Pump stops after short periods</i>	Overload switch tripped	Pump not turning freely. Viscous liquid.



5.1 Recommended spare parts

<i>Code</i>	<i>Description</i>
<i>FI.0063.0000</i>	POLYESTER "M" FILTER 20 POCKETS Ø500H400
<i>FI.0003.0000</i>	D430 H92 ABSOLUTE FILTER
<i>GI.0003.0000</i>	D. 500 FILTER GASKET
<i>GI.0142.0000</i>	ADESIVE GASKET 10X30
<i>GI.0141.0000</i>	ADESIVE GASKET 3X30
<i>SL.0223.0000</i>	D. 500 FILTER CLAMP



DELFIN Srl

Strada della Merla, 49/a

10036 Settimo Torinese (TO) – Italy

Tel. 0039.011.8005500

Fax 0039.011.8005506