

ELECTRIC RANDOM ORBITAL SANDER INSTRUCTION MANUAL



3 in (77 mm)

8,000 - 10,000/min (RPM)

Altertnating Current (AC) INPUT : 100 – 240 Va.c. 47-63 Hz.

POWER SUPPLY Direct Current (DC) OUTPUT: 30 Vd.c. 5A


ADDITIONAL SAFETY WARNINGS

Hold power tools by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.

- To reduce the risk of injury. Operate the Electric power tool with the Power Supply. Other types of power supplies may cause personal injury or damage.

Tool Current	Extension Cord Length ft (m)			
	25(7.6)	50(15.2)	75(22.8)	100(30.4)
0-6A (mm ²)	18 AWG (1.0)	16 AWG (1.5)	16 AWG (1.5)	14 AWG (2.5)

PARTS LIST

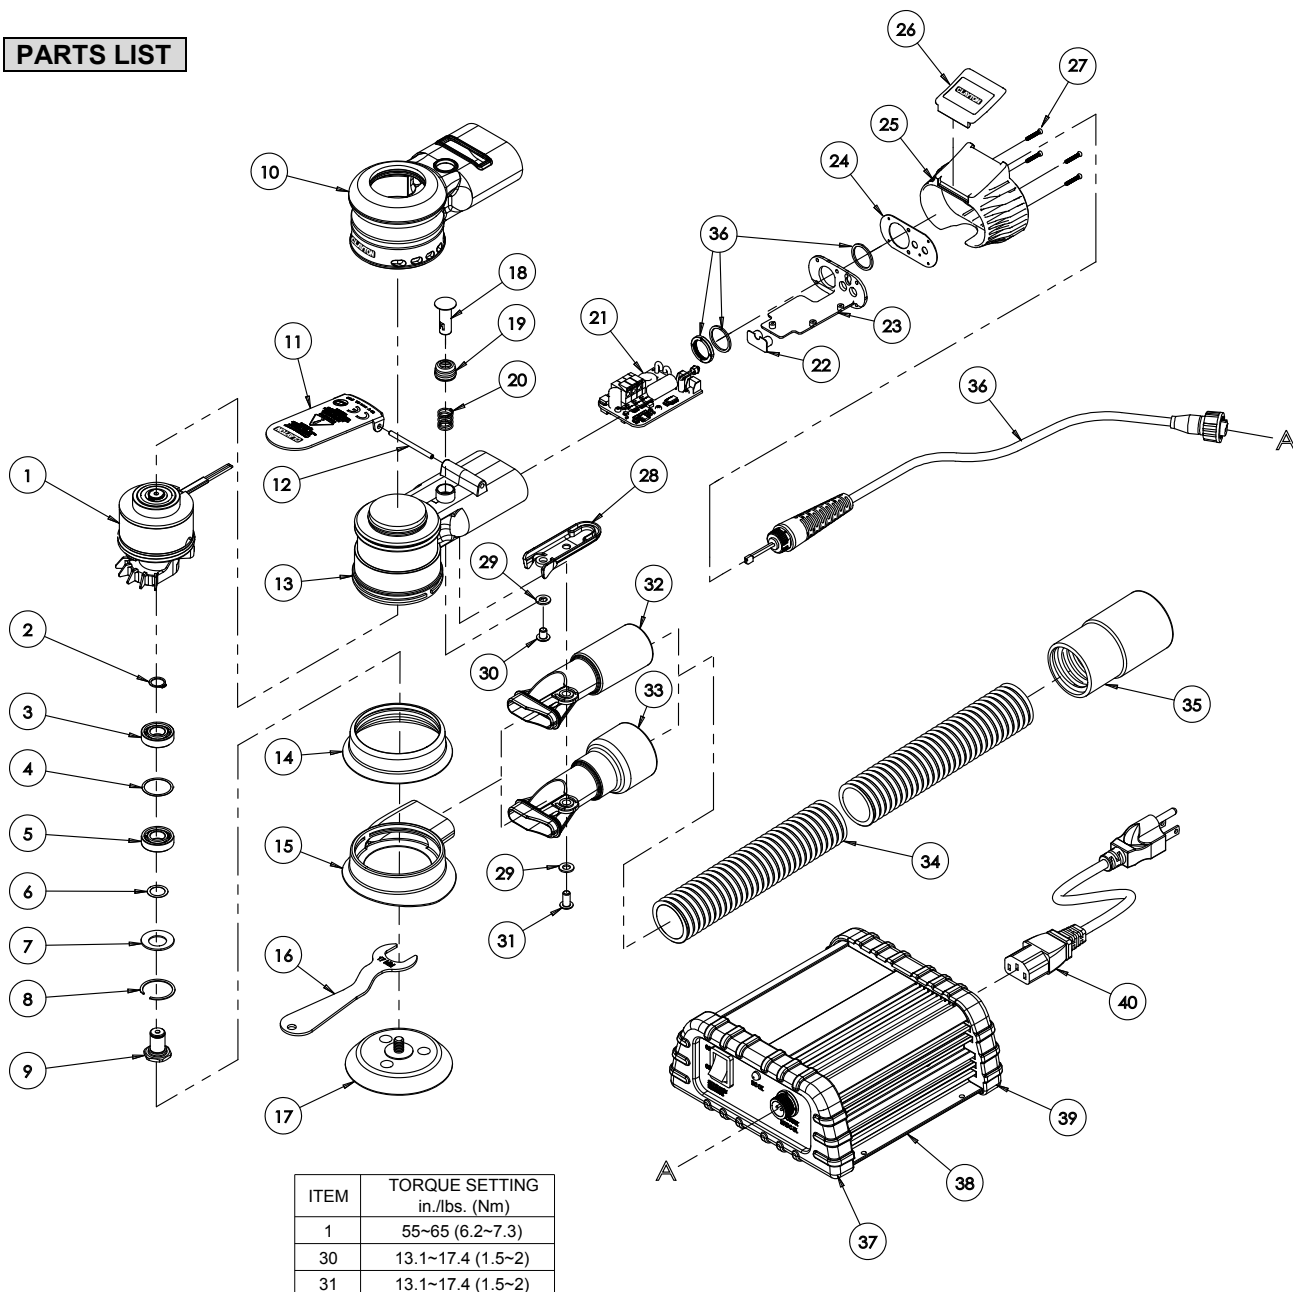

ITEM	TORQUE SETTING in./lbs. (Nm)
1	55~65 (6.2~7.3)
30	13.1~17.4 (1.5~2)
31	13.1~17.4 (1.5~2)

PARTS LIST

Item	P / N	Description	QTY
1	673-30130	Motor Assembly	1
2	673-A0107	Retaining Ring	1
3	673-A0161	Bearing (6900)- NO Seal /Shields 10mm x 22mm x 6mm	1
4	673-A0196	Spacer	1
5	673-A0162	Bearing (6900)-1 Seal 10mm x 22mm x 6mm	1
6	673-A0108	Spacer	1
7	673-A0126	Belleville Washer	1
8	673-A0177	Spindle	1
9	673-B0083	Retaining Ring	1
10	673-32006	Grip 3 in.	1
11	673-50043	Lever For CLAYTON 10,000 RPM e-ROS	1
12	673-A0031	Lever Spring PIN	1
13	673-32001-1	Machined Housing 3 in.(NV)	OPT
13	673-32001	Machined Housing 3 in.(CV)	OPT
14	673-C0046	LWROS NON-VAC SHROUD	1
15	673-32004-AV	CV SHROUD	1
16	673-A0146	WRENCH (17 mm)	1
17	NA	1 PAD SUPPLIED WITH EACH TOOL	OPT
18	673-50018	Valve Assembly	1
19	673-50060	Dust Cover	1
20	673-50019	Spring,10.3 mm OD x 12.5 mm(L) x 0.85 mm (DIA.)	1
21	673-30140	Printed Circuit Board Controller Assembly	1
22	673-50021	Speed Button	1

Item	P / N	Description	QTY
23	673-51039	Base Plate	1
24	673-50069	Dust Gasket	1
25	673-42008	Wrist Rest	1
26	673-50231	Logo Plate	1
27	673-B2-0212D	Hexagon Socket Head Cap Bolt (M2x12L)	4
28	673-31007	Mounting Plate	1
29	673-PW1-050D	Plain Washer (M5x10Lx1T)	2
30	673-S6-0506A	Hex Socket Button Head Screw (M5x6L)	OPT
31	673-S6-0510A	Hex Socket Button Head Screw (M5x10L)	OPT
32	673-16-AV	Swivel Exhaust Fitting - 3/4in. / 19 mm Host	1
33	673-12A-AV	Swivel Exhaust Fitting - 1in. / 28 mm Host	1
34	673-A1485	Vacuum Hose - Ø 1 in. x 6 ft.	OPT
34	673-A1486	Vacuum Hose - Ø 4/3 in. x 5 ft.	OPT
35	673-B0092	Hose End Adaptor - 1 in. / 28 mm Hose Thread x 1 1/2 in. OD	OPT
35	673-B0088	Hose End Adaptor - 3/4 in. / 19 mm Hose Thread x 1 in. / 28 mm Hose Thread	OPT
36	673-50095-I12	Female Connector Cable Assembly (12 feet)	OPT
36	673-50095-I24	Female Connector Cable Assembly (24 feet)	OPT
37	673-52026	Frame-Front End	1
38	673-51072	Power Supply	1
39	673-52058	Frame-Rear End	1
40	673-50047	Power Cord	1

Product Configuration / Specifications : Electric Random Orbital Sander

Vacuum Type	Orbit mm (in.)	PAD Size mm (in.)	Model Number.	Product Net WT. Kg (lb.)	Height mm (in.)	Length mm (in.)
Non Vacuum	2.5 (3/32)	77(3)	ES-030201	0.75 (1.65)	96.2 (3.78)	158.7 (6.25)
Central Vacuum	2.5 (3/32)	77(3)	ES-030235	0.75 (1.65)	96.2 (3.78)	158.7 (6.25)

IMPORTANT NOTE: The actual exposure values and amount of risk or harm experienced to an individual is unique to each situation and depends upon the surrounding environment, the way in which the individual works, the particular material being worked, work station design, as well as upon the exposure time and the physical condition of the user. cannot be held responsible for the consequences of using declared values instead of actual exposure values for any individual risk assessment.

POWER SUPPLY SPECIFICATIONS

Mains Input Voltage*	Mains Frequency	Output	Efficiency	Total Output Regulation	Operation Temperature °C (°F)	Operating Humidity
100-240 Va.c.	47-63 Hz	30 Vd.c. 5A	85% Min.	+/- 2%		

* Note: Device evaluated @ 100-120 Va.c. only for U.S. and Canada.

PRIOR TO THE OPERATION

The tool is intended to be operated as a hand held tool. It is always recommended that while using the tool, operators stand on a solid floor, in a secure position with a firm grip and footing. Be aware that the sander can develop a torque reaction.

“STAND-BY” MODE AND “RUN” MODE

The tool has a safety function that reduces the chance of unintended operation. When the tool is connected to the Power Supply, it is in “Stand-By” Mode. This mode prevents tool from running if the lever is pushed accidentally. “Run” Mode is the normal function of the tool while it is being used.

To switch the tool from “Stand-By” to “Run” Mode:

1. Ensure the tool is connected to the Power Supply and the Power Supply is in the “I” (ON) position. The LED on the back of the Sander will show flashing green color. This shows that the Sander is in “Stand-By” Mode.
2. Press either the “+” or “-” button one time, on the back of the Sander. The LED on the back of the Sander will show solid green color. This shows that the Sander is in “Run” Mode. The tool can now be used normally. While in “Run” Mode, the “+” and “-” buttons will operate to raise and lower the speed of the tool.
3. The Sander will automatically switch back to “Stand-By” Mode anytime it is left un-used for 5 minutes. It can be put back into “Run” Mode by repeating Step 2 above.

STARTING AND STOPPING SANDER

CAUTION: Make certain the Switch on the Power Supply is in the "O" (OFF) position, and the AC power source is the same as specified range on the Power Supply nameplate.

1. Connect the AC power cord to the Power Supply.
2. Connect the 12 ft (3.6 m) or 24 ft (7.4 m) DC cable the tool and to the Power. Ensure both ends of the DC cable are connected and screwed in completely.
3. Turn the Switch on the Power Supply is in the "I" (ON) position. The "DC OK" LED on the Power Supply will show green color. The LED on the back of the Sander will show flashing green color. This shows that the sander is in "Stand-By" Mode.
4. Press either the "+" or "-" button one time, on the back of the Sander. The LED on the back of the Sander will show solid green color. This shows that the sander is in "Run" Mode.
5. Press the lever to start the tool. Release the Lever to stop the tool.
6. When the tool is left un-used in "Run" Mode for 5 minutes, it will go back into "Stand-By" Mode. To return to "Run" Mode, press either the "+" or "-" button on the back of the Sander.



100-240 V.a.c. Socket on Power Supply



30 V.d.c. Socket

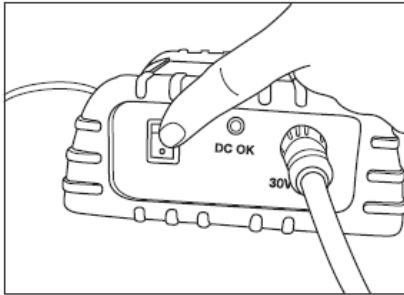


Figure 1

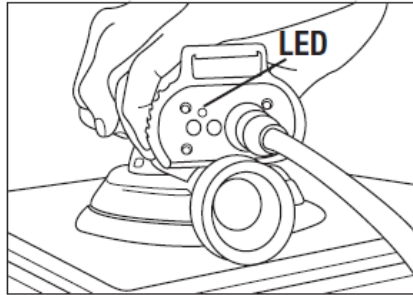


Figure 2

MAXIMUM SPEED FUNCTION

The Electric Random Orbital Sander has two preset Maximum Speeds (8,000, 10,000 /min (RPM))

When the Sander is started after the Power Supply is turned "ON", the Maximum Speed will be 10,000/min (RPM). The Maximum Speed can be changed at any time while the Sander is running or when it is stopped and still in "Run" Mode, as long as the Power Supply is turned "ON".

Any setting for the Maximum Speed will be stored while the Power Supply is turned "ON". When the Power Supply is turned "OFF", the setting will return to 10,000/min (RPM) when the Power Supply is turned "ON" again.

MAXIMUM SPEED AND INTERMEDIATE SPEED CONTROL

1. Maximum Speed is adjusted by pressing the "+" or "-" buttons on the back of the Sander. While the Sander is in "Run" Mode, each touch will raise or lower the speed to the next setting.
2. Intermediate speeds between Zero (0)/min (OPM) and the set Maximum Speed can be used with intermediate Lever positions.

The Electric Orbital Sander has system to protect the motor and circuit board from overloading and overheating.

Temperature Overheat System

The Sander has the ability to monitor temperature of the internal electronic systems, and can shut the tool down when temperature reach damaging levels.

During periods that result in high internal temperature, the Sander will shut down if the temperature reaches a damaging level. The Sander will not be able to be restarted until the internal temperature cools to a level safe for the electronic systems.

Cooling time depends on local conditions. An initial waiting period of 5 minutes is recommended. Repeated overheating will result in longer cool down times.

CLEANING

1. Periodically blow out all air passages and area above Disk Pad and under shroud with dry compressed air. All plastic parts should be cleaned with a soft damp cloth. NEVER use solvents to clean plastic parts.
2. Wear safety glasses while using compressed air.

HEALTH AND SAFETY INFORMATION

RoHS Compliant

This product and the associated component parts are "RoHs Compliant" and do not contain any of the substances in excess of the maximum concentration values in EU Directive 2002/95/EC, as amended by Commission Decision 2005/618/EC and other amendments issued as of the date code marked on the product.



Waste Electrical & Electronic Equipment (WEEE) Compliant

- Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
- Contact your local government for information regarding the collection systems available.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least for free of charge.

Federal Communications Commission (FCC) Compliance Statement

IMPORTANT NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide a reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTICE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry Canada Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.